

CAM SWITCH



VOLTMETER WITCHES

Code No.	Stage	Escutch Plate	connection diagram
C174 3 phase 3 wire	3	<p>P53 P54</p>	
C175 3 phase 4 wire	4	<p>P55 P56</p>	
C176 3 phase 4 wire	4	<p>P57 P58</p>	



AMMETER SWITCHES

Code No.	Stage	Escutch Plate	connection diagram
C177 3 phase 3 wire 2 current transformer	3	<p>P59 P60</p>	
C178 3 phase 4 wire 3 current transformer	4	<p>P61 P62</p>	
C179 3 phase 4 wire 3 current transformer	4	<p>P63</p>	

