

HS821

HS822



Item No.

HS821

Emergency stop switch, (Reset)
Illuminated push off -push on switch
2 Single speed UP, Down (↑ . ↓)
Deep back

HS822

Emergency stop switch, (Reset)
Illuminated push off -push on switch
2 Double speed UP, Down (↑↑ . ↓↓)
Deep back

HS831
HS832

HS833
HS834



HS831

Emergency stop switch, (Reset)
Selector switch 2 position, 1 - 2
4 Single speed

HS832

Emergency stop switch, (Reset)
Selector switch 2 position, 1 - 2
4 Double speed

HS833

Emergency stop switch, (Reset)
Illuminated push off -push on switch
4 Single speed
Deep back

HS834

Emergency stop switch, (Reset)
Illuminated push off -push on switch
4 Double speed
Deep back