

HOIST WATER PROOF PUSH BUTTON PENDANT SWITCH

HS841
HS842

HS843
HS844



Item No.	
HS841	Emergency stop switch, (Reset) Selector switch 2 position, 1 - 2 6 Single speed
HS842	Emergency stop switch, (Reset) Selector switch 2 position, 1 - 2 6 Double speed
HS843	Emergency stop switch, (Reset) Pilot lamp 6 Single speed
HS844	Emergency stop switch, (Reset) Pilot lamp 6 Double speed

HS861
HS862

HS851
HS852



HS851	Emergency stop switch, (Reset) Pilot lamp 6 Single speed 2 Double speed
HS852	Emergency stop switch, (Reset) Pilot lamp 4 Single speed 4 Double speed
HS861	Emergency stop switch, (Reset) Selector switch 2 position, 1 - 2 6 Single speed 4 Double speed
HS862	Emergency stop switch, (Reset) Selector switch 2 position, 1 - 2 4 Single speed 6 Double speed